

AUTO-RAIN


Auto-Rain Self-Drain Sprinkler Start-Up and Shut-Down Instructions

RPZ - INDOOR

*****These instructions are for Auto-Rain systems installed 2017 or Later*****

Shut-Down: FALL (October recommended)

1. Turn off main water supply valve and (2) ball valves on RPZ unit
2. Open boiler drains outside and inside (if any)
3. "Back drain" copper pipe from outside to inside. This can be done by opening last test cock on RPZ (if using RPZ test cock, the outflow ball valve will need to be opened until back drain is complete)
Then close test cock and ball valve
4. Run (2) manual sprinkler cycles
5. Suspend controller operation until spring of the following year (Do NOT un-plug controller)

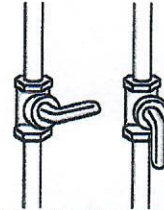

CLOSED OPEN

BALL VALVE

Start-Up: SPRING (May/June recommended)

1. Close any/all open boiler drains inside and outside
2. Open main water valve in basement, then open RPZ ball valves
3. Test and observe all Zones. If you notice leaks or broken heads, please call us to schedule a service appointment
4. Call to schedule RPZ Certification if required by law for your village (check your Village website)



Ball Valve OPEN



Ball Valve CLOSED



Ball Valve Winter Position

*****IMPORTANT*****

45-degree angle

If at any point you feel you need assistance, please feel free to give us a call!

847-949-7246